

Appendix A

Adjusting video settings with the on-screen display (OSD) menu

Changing settings in the OSD menu.....	55
OSD menu settings.....	56
Display settings.....	57
Display Alignment settings.....	57
System settings.....	57

Your screen settings adjust automatically when you turn on your interactive pen display. This feature adjusts the vertical position, horizontal position and phase settings. You can also use the on-screen display (OSD) menu to adjust your screen settings. See *Changing settings in the OSD menu* below for more information.

i NOTES

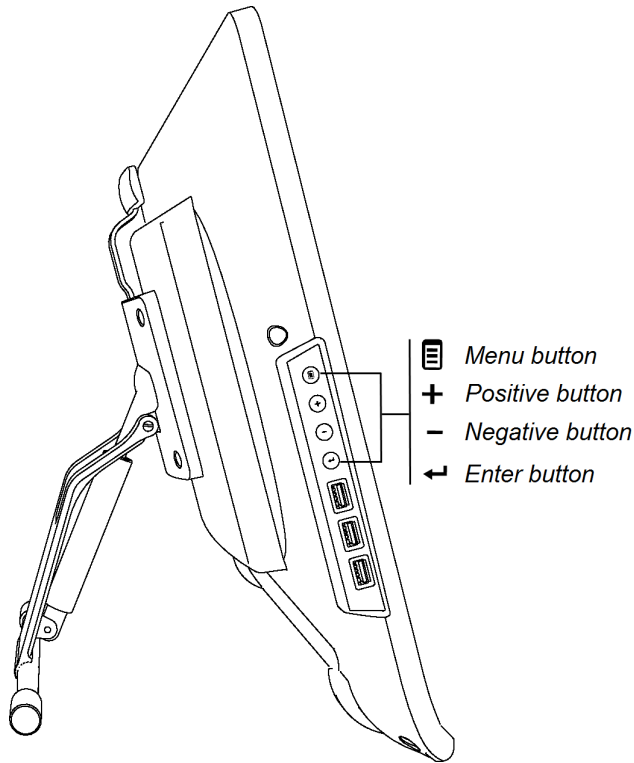 
- For optimal display quality, set your video card to the native resolution of your interactive pen display.
- If the interactive pen display doesn't automatically adjust your screen settings, you can use the Auto Adjust (VGA only) OSD option.

Changing settings in the OSD menu


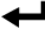 
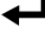 

You can adjust many of the interactive pen display screen settings using the OSD menu.

APPENDIX A

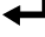 
Adjusting video settings with the on-screen display menu

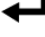 



■ To change settings in the OSD menu

1. Press **Menu**  on the control panel.
The OSD menu appears.
2. Press **+** and **-** to browse to the sub-menu that contains the setting you want to change.
3. Press **Enter**  to select the sub-menu.
4. Press **+** and **-** to browse to the setting you want to change.
5. Press **Enter**  to select the setting, and then press **Enter**  again to change the setting.

OR

Press **Enter**  to select the setting, and then press **+** to increase or **-** to decrease the value of the setting.

6. Press **Enter**  to save your changes.
7. Press **Menu**  to return to the previous screen or to exit the OSD menu.

OSD menu settings

The following tables contain the settings available through the OSD menu.

APPENDIX A

Adjusting video settings with the on-screen display menu

Display settings

Menu item	Function
Contrast	Adjusts the difference between the lightest and darkest areas of the image
Brightness	Adjusts the overall brightness of the image and background
Sharpness	Adjusts the sharpness of the image
Color Mode	Adjusts the color temperature of the entire screen

Display Alignment settings

Menu item	Function
Auto adjust	Automatically adjusts the H Position, V Position and Clock Phase settings
Horizontal	Controls the horizontal position of the image within the display area
Vertical	Controls the vertical position of the image within the display area
Clock	Adjusts the width of the image
Phase	Adjusts the visual noise on the image

System settings

Menu item	Function
Language	Selects the language used by the OSD menu
Power Save	Sets how long the interactive pen display waits to go into Power Save mode after a lost video signal
Scaling	Sets the scaling to either 1:1 or Full
Information	Selects if the Information OSD menu is displayed. This menu contains Scaling, Source and Firmware information.
Factory reset	Restores the OSD menu settings to their factory default values
OSD timeout	Sets how long the OSD menu sits idle before automatically closing